doro 615r

DORO

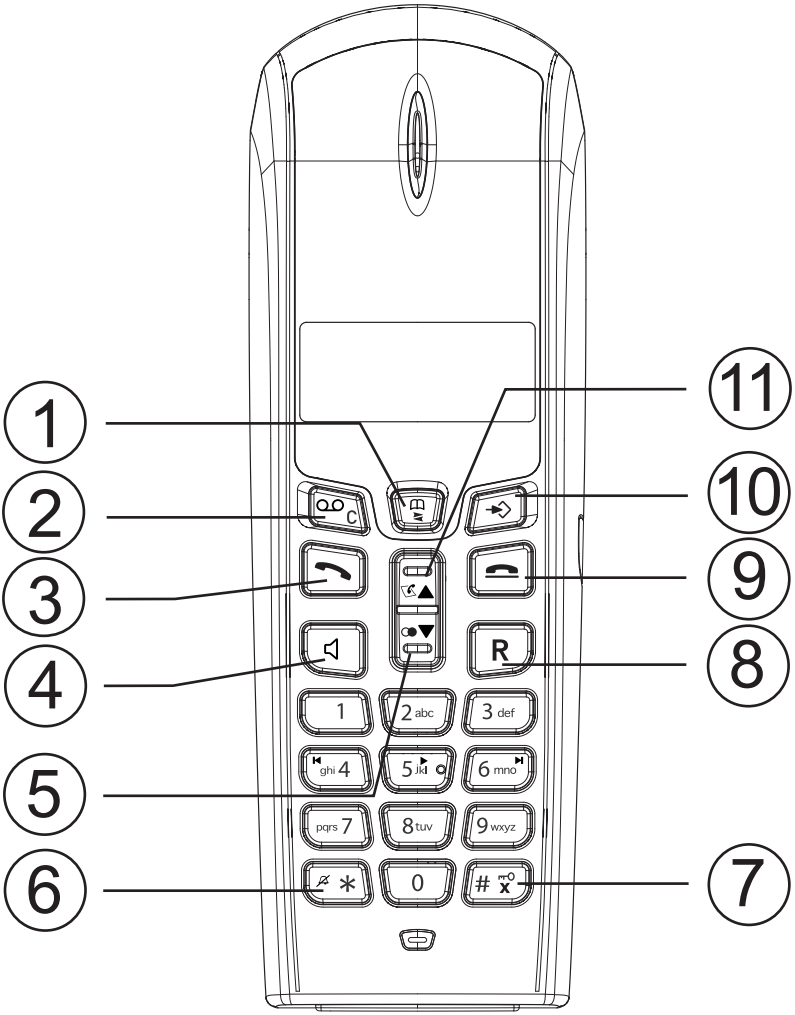

1 Speed dial number/ internal call
2 Delete/answering machine
3 Talk button
4 Speaker phone
5 Disconnect/Redial
6 ✱ and ringer signal on/off
7 # and key lock
8 Flash button
9 Disconnect button
10 Programming
11 UP/Missed no.

Connection

1. Connect the mains adapter (6V DC) and the telephone cord to the wall sockets.
2. Insert the batteries (AAA 1.2V 600 mAh NiMH) with plus-/minus as indicated.
3. Charge the handset with the keypad facing outwards (for 24 hours the first time).

Date/Time

4. Press → 1.
5. Enter time of day (HH MM). Press →.
6. Set date (DD.MM.YY). Press →.

Battery

Because batteries only have a certain lifespan it is quite normal that call time and standby time will decrease somewhat compared to the specifications when the telephone is used regularly.
Fully charged batteries (10 hours charging) will last for approx. 100 hours standby time or approx. 10 hours call time. These times apply at normal room temperature.
Full battery capacity will not be reached until the batteries have been charged 4-5 times.
The base unit has an automatic charging mechanism that prevents the batteries from being overcharged or damaged due to prolonged charging.

Battery LED

When the batteries are running low, the indicator will show and a warning tone will be heard once when the indicator drops to its lowest level during a call.
Please note that the battery indicator in the display will flash as long as the handset is located in the base unit, and will not stop/go out even when the battery is fully charged.

Making a call

1. Enter required telephone number (**C**=delete).
2. Press , and the number will be dialled. Press to terminate the call.

Receiving a call

1. Wait for the handset to ring. Lift the handset.
2. Press to answer. Press to terminate the call.

Please note!
To switch between handset/speaker press / . Please remember that in speaker mode, it is only possible for one person at a time to talk.
When the battery is low or when there is too great a distance to the base unit the telephone will be unable to connect to a line.
The base unit should not be located close to other electrical equipment, in direct sunlight or near any other strong heat source! This is to minimize the risk of any interference.
It is normal for the device to become warm during charging and this is not dangerous.
Use only original batteries. The guarantee does not cover any damage caused by incorrect batteries.

Range

The telephone's range depends on whether or not the radio waves carrying the call are restricted by obstacles in their path, and is usually between 50 and 300 metres. Coverage can be improved by turning one's head so that the handset is aligned with the base unit. Sound quality declines as the limit is reached until the call is finally interrupted.
The symbol is shown when the phone is within range and goes out/flashes when it is out of range.

Volume control

The volume may be adjusted during a call using ▲/▼.

Call Back

Scroll among the 5 most recently dialled numbers with . Press .

Mute button

The microphone may be muted/switched on during a call by using **C** (⊠=off).

KeyGuard

The keyguard is turned on/off by pressing down # (O-=on).

Paging

The handset will ring when ◄ (on the base unit) is pressed. The signal will stop automatically after a while or if the L button on the handset or the ◄ button on the base unit is pressed.

Memory

This telephone has 10 speed dial memory locations.
A stored phone number can be dialled using fewer keystrokes.
If you want a pause in the telephone number, press and hold **0** *until the display shows P.*

Storing speed dial memory locations

1. Press →◇ 🕮.
2. Select a memory location (0-9) using 🕮.
3. Enter telephone number (up to 20 digits). Press →◇ (**C**=delete).

Dialling using speed dial memories

1. Scroll among the speed dial positions using 🕮. You can also enter the memory position directly using **0**-**9**.
2. Press ✆, and the number will be dialled.

Erasing all speed dial numbers

Press →◇, **0** , 🕮 , →◇.

Incoming numbers (Caller ID)

The display shows you who is calling and the 10 most recent incoming numbers.
New numbers are indicated by **-CALL –** in standby mode and **n-** in the list.
If one and the same number calls in more than once it will be saved as only one entry.
This function requires a subscription from your service provider.

Retrieving and dialling incoming numbers

1. Press ✆▲.
2. Scroll to the required entry using ▲/▼. Press # for time/date.
3. Press ✆ to dial, **C** to delete or ✆ to return to standby mode.

Erasing all numbers

Press →◇, **0** , ✆▲ , →◇.

Caller identification messages

In addition to number display, sometimes the following message is shown:

-O-	Unknown number, e.g. international call (not stored).
-P-	Anonymous number. Number withheld (not stored).
–	The number is longer than the display can show (>12 digits).

Settings

1. Press →. Press commands as listed below, e.g. ringer signal volume.
2. The display shows the current status, e.g. **P-5** **2-5** means command 5, current setting 2 of 5 positions.
3. Scroll to desired setting with ▲/▼, e.g. 5 for max. Press →.

Command	Function
2	Time format (24=24-hr, 12=12-hr)
4	Ringer signal type (1=type 1....6=type 6)
5	Ringer signal volume (1=min....5=max)*
6	Key beep (On=On, OFF=Off)
7	Tone/Pulse (1=tone/normal, 2=pulse)
8	Auto Answer, i.e. the handset responds to incoming calls when it is lifted from the base (On=On, OFF=Off)
9	Resetting (Enter PIN code, 0000 when supplied)
R	Flash time (100=standard, 300=France/Portugal)

*Ringer signal can be connected/disconnected in standby mode with ✖ (=off).

PIN code

The PIN code (four digits) provides protection against unauthorised use of certain functions.

1. Press → ✖.
2. Enter the current PIN code (0000 when supplied). Press →.
3. Enter the new code. Press →.
4. Enter the new code again. Press →.

Expanded system (only +1…)

The handset number used for internal calls is shown in the display on standby mode. The base unit should be positioned centrally so that the coverage area is roughly equal for all handsets.
It is not possible to add extra handsets at a later point.

INT calls

1. Press until the display shows INT.
2. Enter the allocated number of the handset that you wish to call, 1 - 4.

A tone will be heard if an external call comes in while an internal call is in progress. Terminate the internal call by pressing before receiving the external call with .

Transferring calls/Conference between handsets

1. An external call is connected.
2. Initiate an internal call as described above.
3. Press to transfer the call or press for conference.

Answering machine (615r only)

When the answering machine is switched on calls are answered after six ringer signals, your outgoing message is heard and the caller can leave a message (max. 3 minutes).

Switching the answer machine on/off

1. Press ⌘. Wait until 🔊 is shown.
2. Press **0**. Scroll to required setting with ▲/▼.
3. Press →. Finish by pressing ☎.

Outgoing message

The outgoing message (max. 3 minutes) is heard by incoming callers.

1. Press ⌘. Wait until 🔊 is shown. Press **9**.
2. After the beep you can record your message (speaking approx. 30 cm from the handset's upper side).
3. Press **5** (▶). The message will be played back to you.
4. End by pressing ☎. Repeat the procedure if you wish to change anything.

Playback of messages

The ⌘ symbol is shown in the upper right corner of the display when there are new messages. Playback always starts with new messages. A beep is heard between old and new messages.

1. Press ⌘. Wait until 🔊 is shown. Press **5**.
2. The display shows position, time of day and date of the message.
3. Finish by pressing ☎.

Command	Function
4 (|◀)	Repeat/skip to previous message
5 (▶)	Playback of messages/Stop
6 (▶|)	Skip to next message
7	Playback of outgoing message
# (**x**)	Erase single message during playback
▲/▼	Volume control
☎ / 🔈	Switch between handset/speaker

Delete all old messages

Press →, **0** , # , →.

Settings in answering machine

1. Press ⏀. Wait until 🔊 is shown.
2. Press commands as listed below, e.g. **3** for Call screening.
3. Scroll to desired setting with ▲/▼, e.g. **On** for On.
4. Press →. End by pressing ☎.

Command	Function
2	Select outgoing message (various languages)
3	Call screening* (On=On, OFF=Off)
0	Switching the answering machine On/Off (⏀ =On)

**The call screening function (will only work with handset 1) means callers who leave a message are heard in the handset's speaker . You can press ☎ or lift the handset of another phone to talk to the caller if you wish to do so.*

Change RemotePIN

The Remote PIN (four digits) protects against unauthorised remote control.

1. Press ⏀. Wait until 🔊 is shown. Press ✱.
2. Enter the current PIN code (0000 when supplied). Press →.
3. Enter the new code. Press →.
4. Enter the new code again. Press →.
5. Finish by pressing ☎.

Out of memory

The memory will store a total of 8 minutes of messages (including the outgoing message).

F flashes in the display if the memory is full, and no new messages can be received until the old ones have been played back and erased.

PLEASE NOTE! Remember to delete messages regularly!

Remote control

This machine can be remote controlled using the keys of an ordinary tone dialling telephone.

1. Call your own phone number.
2. Press ✱ when the outgoing message is played.
3. Enter the Remote PIN code (see previous page). One beep confirms correct code.
4. Any new messages are played, or you can select a remote command, see below.
5. Hang up.

Command	Function
4	Repeat/skip to previous message
5	Playback of messages/Stop
6	Skip to next message
#	Erase single message during playback

Please note!
If the machine doesn't respond to the remote control commands, try pressing the telephone buttons for a longer or shorter time. In normal cases, the answering machine should react to tones approximately 0.5 – 1 seconds in length, but longer tones may be necessary in certain telephone networks.

Troubleshooting

Check that the telephone cord is undamaged and correctly plugged in. Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment. Test the equipment on a known working line (e.g. at a neighbour's house). If the equipment works there then the fault is probably with your telephone line. Please inform your network operator.
Check the charge status of the handset batteries.
If the telephone still does not work, contact the place of purchase. Don't forget the receipt or a copy of the invoice.

Specific Absorption Rate (SAR)

This device meets approved international safety requirements for exposure to radio waves. This telephone measures 0.04 W/kg (measured over 10g tissue).
The max. limit according to WHO is 2W/kg (measured over 10g tissue).

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.
This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the device during a thunderstorm.
Batteries are consumables and are not included in any guarantee.
This guarantee does not apply if other batteries than DORO original batteries have been used.

Declaration of conformity

Doro hereby declares that the Doro 615r conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC and 2002/95/EC.
A copy of the manufacturer's declaration is available at www.doro.com/dofc

UK

If you cannot resolve the fault using the faultfinder section, technical support is available by email on tech@doro-uk.com or via a **premium rate telephone number: 0905 895 0854**, calls cost **50 pence per minute** (prices correct at the time of publication).
You can also contact us in writing: Customer Services, Doro UK Ltd, 1 High Street, Chalfont St Peter, Buckinghamshire, SL9 9QE (regarding any Spares or Technical query).
Further contact details are available on our website: www.doro-uk.com.

Australia and New Zealand

Products permitted for connection to the telephone network are marked with ⚠ in Australia and ✔ TELEPERMIT in New Zealand. These marks indicate the products comply with the regulations and can be used without concern in the country of purchase.

If you believe this product is malfunctioning, please refer to the relevant section and/or consult the troubleshooting guide in this manual to ensure that you have followed the instructions carefully. As an alternative you can visit our web site for FAQ's or send an e-mail for a prompt reply.

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. Should you experience difficulties with the product, please contact us for assistance. If the product is then found to be faulty you will be asked to return it directly to us with a copy of the purchase receipt. This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress negligence, abnormal usage, not reasonably maintained or any other circumstances on the purchaser's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or lightning, excessive or any other voltage fluctuations or faults on the telephone line. (As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm).

This guarantee does not affect your statutory rights.

AUSTRALIA
DORO Australia Pty Ltd
PO Box 6760
Baulkham Hills BC NSW 2153
Australia

Consumer Support
Ph: Ph: 1300 885 023
Fax: (02) 8853-8489
Email: support@doro.com.au
Web site: www.doro.com.au

NEW ZEALAND
Atlas Gentech (NZ) Limited
Private Bag 14927
Panmure
Auckland
New Zealand
Consumer Support
Ph: 0900-500-25 (Toll Call)
Fax: (09) 574-2722
Email: support@atlasgentech.co.nz

REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

ALL PRODUCTS

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service.

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom Customers.

CND PRODUCTS

If a charge for local calls is unacceptable, the "DIAL" button should NOT be used for local calls. Only the 7 digits of the local number should be dialled from your telephone. DO NOT dial the area code digit or the "0" prefix.

English

Version 1.0

www.doro.com